

## External connection cables

External connection cables vary depending on the PC interface software type.  
The types and external connection cables are shown in the table below.

Type	External Connection Cable
RCM-101-MW	RS232C conversion unit (RCB-CV-MW): 1 cable Communication cable (CB-RCA-SIO050): 1 cable
Connection Configuration	<p>RS232C conversion unit RCB-CV-MW</p> <p>Compatible controller PCON, etc.</p> <p>Communication cable: CB-RCA-SIO050</p>

Type	External Connection Cable
RCM-101-USB	USB conversion unit (RCB-CV-USB): 1 cable Communication cable (CB-RCA-SIO050): 1 cable USB cable (CB-SEL-USB010): 1 cable
Connection Configuration	<p>USB conversion unit RCB-CV-USB</p> <p>Compatible controller PCON, etc.</p> <p>USB cable CB-SEL-USB010</p> <p>Communication cable CB-RCA-SIO050</p>